TD 9-6930-703-10

M2/M3 MILES 2000 BORESIGHT PROCEDURES

BORESIGHT THE MILES AT MAX ENGAGEMENT RANGE IF POSSIBLE, AT NTC NO LESS THAN 3000 METERS.

- 1. Turn on vehicle master power and turret power, set turret for power mode operation, turn on night sight.
- 2. Select range "0" on range wheel, [if using superelvation suppression system] set it to "MILES", if not using the SSS, turn BLRF off, open ballistic shield doors, select "Hi" magnification, select "AP" ammo, verify AP reticle in the gunner's sight.
- 3. Look through the gunner's sight and use the GUN BORESIGHT AZ adjustment knob to move the AP reticle until the vertical center line of the AP reticle is aligned with the vertical center line of the TOW reticle. [Do not make adjustments for elevation at this time].
- 4. Use the gunner's hand station in the power mode to lay the AP reticle on the aiming point on the bore sight target.
- 5. Remove the adjustment cover from the rear on the ULT. Look through the scope on the ULT and use the adjustment knobs to move the ULT reticle to the same defined aiming point as the AP reticle. Leave the adjustment cover off at this time.
- 6. Refer the AUX sight to the same aiming point as the AP reticle.
- 7. Set the ISU for night operation, use the night bore sight knobs to refer the night sight reticle to the day sight same aiming point.

TOW ALIGNMENT PROCEDURES

- 8. Raise the TOW launcher and select high mag.
- 9. Select TOW on the missile control box. Verify that the ULT is still on the defined aiming point by looking through the ULT scope.
- 10. WITHOUT MOVING THE GUNNER'S HANDSTATION, use a small flat tip screwdriver to turn the TOW bore sight screw to refer the TOW reticle in elevation to the defined aiming point. (NOT USED WHEN USING ISU WORK AROUND BOX)
- 11. Use the gunner's hand station to lay off then back on the defined aiming point in a "G" patter, confirm that the TOW reticle and the ULT reticle are on the same defined aiming point.
- 12. Select "AP" ammo, using a "G" pattern, lay the AP reticle on the defined aiming point, confirm that both the AP reticle and the ULT are on the same aiming point.
- 13. Replace the ULT adjustment cover.
- 14. Fire all weapon systems at a MILES instrumented target to confirm a kill.

| For use o | of this form | | NK FORMS | ; | NS AND ency is the U | Use Part II (reverse) (Special Tool Lists (RI Catalogs/Supply Man | PSTL) and Supply | DATE I | | | | |
|-------------|---|----------------|---------------|---------------|--------------------------|---|--|-----------|---|--|--|--|
| TO: (Forv | vard to prop | onent of publi | cation or for | m) (Include . | ZIP Code) | | FROM: (Activity and location) (Include ZIP Code) | | | | | |
| | | | | | | | | | | | | |
| 51151164 | | ORMS | | | | | | | | | | |
| PUBLICA | | M NUMBER | | | | DAT | | | TITLE | | | |
| ITEM NO. | PAGE NO. | PARA- GRAPH | LINE NO.* | FIGURE NO. | TABLE NO. | | | | NGES AND REASON nded change must be given) | | | |
| | | | | | | | | | | | | |
| | * Reference to line numbers within the paragraph or subparagraph. | | | | | | | | | | | |
| TYPED N | AME, GRAI | DE OR TITLI | Ē | TEL | EPHONE EX IS EXTENSIC | CHA | NGE/AUTOVON, | SIGNATURE | | | | |

DA

| TO: (For | ward to pro | publication or form) | (Include ZIP | Code) | ı | FROM: (Activity and location) (Include ZIP Code) DATE | | | | | | | |
|--|-------------|----------------------|------------------|----------------|------------------|--|--|-------------|---------------------------------|------------------------------------|---------|-------------|--|
| | | | | | | | | | | | | | |
| | | PART | Γ II- REPAIR PAR | TS AND SP | ECIAL TOOI | L LI | LISTS AND SUPPLY CATALOGS/SUPPLY MANUALS | | | | | | |
| PUBLICA | ATION/FO | | | | ATE | | | | | | | | |
| | | | | | | | | | | | | | |
| PAGE NO. | COLM NO. | | | TOCK R | REFERENCE NO. | | FIGURE NO. | ITEM NO. | | TOTAL NO. OF MAJOR ITEMS SUPPROTED | RECOMME | NDED ACTION | |
| | | | | | | | | | | | | | |
| | | | | | | | | | | | | | |
| | | | | | | | | | | | | | |
| | | | | | | | | | | | | | |
| | | | | | | | | | | | | | |
| | | | | | | | | | | | | | |
| | | | | | | | | | | | | | |
| | | | | | | | | | | | | | |
| | | | | | | | | | | | | | |
| | | | | | | | | | | | | | |
| | | | | | | | | | | | | | |
| | | | | | | | | | | | | | |
| | | PART III | - REMARKS (Any | general rem | arks or recom | endations, or sug ts may be used ij | gestion | s for | improvement of publics needed) | ications and | | | |
| | | | Dunk | joims. Auut | ionai viank si | псс | is muy ve useu y | mores | space | is needed.) | | | |
| | | | | | | | | | | | | | |
| | | | | | | | | | | | | | |
| | | | | | | | | | | | | | |
| | | | | | | | | | | | | | |
| | | | | | | | | | | | | | |
| | | | | | | | | | | | | | |
| | | | | | | | | | | | | | |
| | | | | | | | | | | | | | |
| | | | | | | | | | | | | | |
| | | | | | | | | | | | | | |
| | | | | | | | | | | | | | |
| | | | | | | | | | | | | | |
| TYPED NAME, GRADE OR TITLE TELEPHONE EXCHANGE TO THE TELEPHONE THE TELEPHONE TO THE TELEPHONE TO THE TELEPHONE THE TELEPHONE THE TELEPHONE T | | | | | | | E/AUTOVON, | | SIG | NATURE | | | |
| | | | | PLUS EXTENSION | | | | | | | | | |